



TELEMANDO PROGRAMABLE POR PC, SMARTPHONE Y TABLET • 2 EN 1

ES Programación por PC

Descargue, instale e inicie el software de programación de mandos "Made for You". Introduzca las pilas en el alojamiento de la parte posterior del mando.

Conecte el programador IR al puerto USB. Identifique el mando siguiendo las instrucciones que le indica el software.

Elija el tipo de mando, la marca y el modelo. Programe el mando, en unos segundos estará listo para usar.

Programación por smartphone, tablet o PC con cable de audio

Abra un navegador web y diríjase a la dirección www.made4youweb.it.

Siga las instrucciones que aparecerán en pantalla.

EN PC programming

Download, install and run the programming software "Made for You".

Insert the batteries in the back of the remote.

Connect the IR programmer to the USB port. Identify the command following the instructions given by the software.

Choose the type of control, make and model. Program the remote, it will be ready in a few seconds.

Smartphone, tablet or PC programming by audio cable

Open your favourite web browser and go to www.made4youweb.it.

Follow the on-screen instructions.

PT Instruções

Baixar, instale e execute o software de programação "Made for You".

Coloque as pilhas no compartimento na parte traseira do controle remoto.

Ligue o controlador ao IR porta USB

Identificar o comando seguindo as instruções que informa ao software.

Escolha o tipo de comando, a marca e modelo. Programar o comando em poucos segundos você está pronto para usar.

Smartphones programação, tablet ou cabo de áudio PC

Abra un navegador da web e ir para a direção www.made4youweb.it.

Siga as instruções na tela.

Guía de correspondencia de teclas y funciones del mando Remote control keys and function matching guide Teclas de controle remoto e guia de correspondência de funções

Layout Keys	TV		SAT		DVD		VCR		HI FI	
	Direct	Shift	Direct	Shift	Direct	Shift	Direct	Shift	Direct	Shift
AV	Tv/Av	Av 2	Tv/Sat	Sat Sky	Dvd/Tv	Input Source	Vcr/Tv	Input Source	Input Source	Aux Video
Power	on/off Tv	on/off Vcr	on/off Sat		on/off Dvd	on/off Vcr	on/off Tv	Power		
Shift	Shift		Key		Shift Key					
Exit	Off Menu	Sys Mode	Exit		Return	Syst. Preset	Exit	Syst.	Funct. Direct	Tuner Disc skip
Menu	Menu	Mode	Menu	Navi Mode	Menu	Mode	Menu	Show View	CD Theater	Em mode
Sound	Menu Audio	S. Std	Audio	Primaria Home Cinema	Top Menu	Audio	Audio	Cass. Tape	Tape 1 Hall/Ats	Phono Scan
Picture	Menu Video	P. Std	Video	Interat.	Title	Video	Video Go-To	Skip/Search	Tape 2 Pres/eq	Band
1	1	De-emph	1.		1	5.1 Ch	1	Once	Pr 1	Disc 1
2	2	Swap	2	abc	2	2.1 Ch	2	Daily	Pr 2	Disc 2
3	3	P. lock	3	def	3	Pro Logic	3	Weekly	Pr 3	Disc 3
4	4		4	ghi	4	Ntsc/Pal	4	Otr A. Otr	Pr 4	Disc 4
5	5		5	jkl	5	Effect	5	Rec On/Off	Pr 5	Disc 5
6	6	Help	6	mmn	6	EQ	6	Rec/Mode Pri/Check	Pr 6	8 Ch Seq
7	7	Copy	7	pqrs	7	Mark	7	Mark Add/De	Pr 7	Mark Delete
8	8	Delete	8	tuv	8	Erase	8	Erase	Pr 8	Erase Snooze
9	9	Clear	9	wxyz	9	Clear	9	Clear next	Pr 9	Clear
Guide	Guide Set 1/2	3 *	Guide Pilot	Auth. DISEQC	+10	Digest	-/-	Next Sv+V	Mode +10	
0	0/10	View	0/10	View	0	Dimmer	0	Pal/Secam	Pr 0/10	Dimmer
Fav P/C	2, Fav P/C	4, Fav 16:9	Fav X Pref.	Alt 16:9	C/Ch	3D	Progr C/Ch	Vps/ Pdc	Program	Scene Default
Up	Menu Up	Search	Menu Up	Search	Menu Up	Search	Menu Up	Search Index	Cd/play	Search Center +
Left	Menu Left	Tune	Menu Left	Tune	Menu Left	Key	Menu Left	Index Pict	Col/rew	Tune Vol Sw
OK	OK Enter	Atf/Caf	OK Enter	Atf/Caf	OK Enter	Auto Scan	OK Enter	Ch/Menu	Col/stop	Center

Layout Keys	TV		SAT		DVD		VCR		HI FI	
	Direct	Shift	Direct	Shift	Direct	Shift	Direct	Shift	Direct	Shift
Play	Menu Right	Tune +	Menu Right	Tune +	Menu Right	Key +	Menu Right	Intro	Call/Fwd	Tune Vol Sw +
Stop	Menu Down	Store	Menu Down	Store	Menu Down	Store	Menu Down	Store	Pause	Store Center
VOL +	Volume +		Volume +		Volume +	Vocal Assist.	Tracking +	Set +	Volume +	Taxk Echo
VOL -	Volume -		Volume -		Volume -	Tone	Tracking -	Set -	Volume -	Taxk Karaoke
CH/ Page -	Chan. Down		Ch/pag -		Prev. k	Echo -	Prev. k	Chan. +	Skip Prog -	Index Vol Ls -
CH/ Page +	Chan. Up		Ch/pag +		Next k	Echo +	Next k	Chan. -	Skip Prog +	Index Vol Ls +
Mute	Audio Off		Audio Off		Audio Off	Open Close	Audio Off	Eject Reverse	Mute	Eject
i+	Disp. Recall		Disp. Recall	22 KHz	Disp.	R/L	Disp.	Timer Record	Display	Jobs Check
Text	Text Tv/Text		Text	Radio	Repeat 1/All	Pbc	Sp/PLP Speed	Repeat	Repeat	Edit
TV DTV	Return TV Digital		TV	Scan Setup	Rep/ A-B	Setup	Mon TV	Info Intro	Random	Intro
SLEEP	Sleep Timer		Sleep Timer	Sys/ Serv	Auto/Track	Timer	Auto/Track	Timer Sleep	Sleep	Classic Track
...	Subt. Liste		Subt. Liste	+	Subt.	Np	SlowDiss	Frame	Vol. Rs - Effect	Timer A. Track
...	List Expand		Zoom	Pers.	Zoom	Game	SlowDiss	Frame	Vol. Rs + X-Bass Bgm	
Back	P+P Q.View		Back	Browse	Progr.	Remain	T. Set Clock	Count Remain	Woods Speed	Surround Test Tones
X Epg ?	Update		Epg	West	Slow	Resume	Slow	Counter Clock	Every Pop	C. Clock X-Bass
...	Reveal		Opt ?	Dev	Slow	Play	F. Adv	Counter Memory	Page 1	Page 2
...	Txt Stop		App	Freeze	Stop	Play Back	Stop	Counter Stop	Page 1	Page 2
i	Info P 100		Info	Dec Pause	Pause	Info	Pause	Counter Reset	Page 1	Page 2
Red	Fastest Red		Red	East	Record	Angle	Record	Audio Dub	Page 1	Page 2
Green	Fastest Green		Green	Lang	Rew	Lang	Rew	Encore	Page 1	Page 2
Yellow	Fastest Yellow		Yellow	H/V	Play	Random	Play	X 2 FastPlay	Page 1	Page 2
Blue	Fastest Blue		Blue	Lnb	F. Forw	Shuffle	F. Forw	P. Back	Page 1	Page 2